


TR-300XL

30 Ton Capacity (27.2 Metric Tons)

ADRAULIC ROUGH TERRAIN CRANE

DIMENSIONS

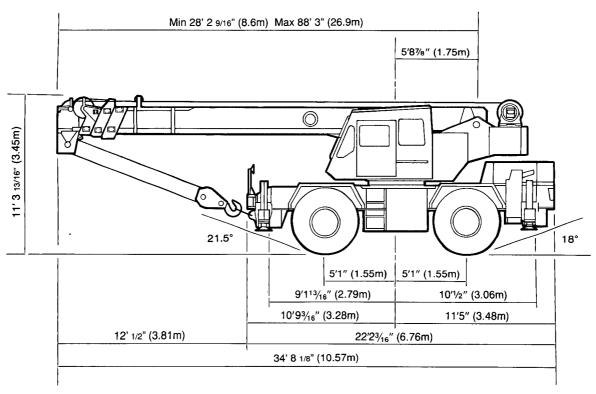

GENERAL DIMENSIONS (20.5 X 25 Tires)


	Feet Meters
Tail swing counterweight	9' 8 1/8" 2.95
Turning Radius:	
4 wheel steer	19' 2 1/8" 5.8
2 wheel steer	35' 13/16" 10.7

MDI/TADANO

XL SERIES

Supplied by

★ Mitsubishi Corporation

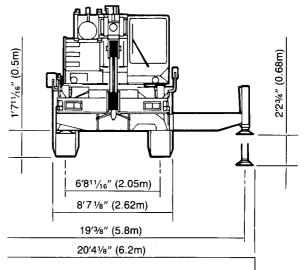

CRANE SPECIFICATIONS

BOOM

Four section full power partly synchronized telescoping boom, 28.2'~88.3' (8.6~26.9m), of box construction with four sheaves, 12 5/8" (0.32m) root diameter, at boom head. The synchronization system consists of a telescope cylinder, an extension cable and retraction cable. Hydraulic cylinder fitted with holding valve. Two easily removable wire rope guards, rope dead end provided on right side of boom head. Boom telescope sections are supported by wear pads both vertically and horizontally.

BOOM ELEVATION - By a double acting hydraulic cylinder with holding valve. Elevation 0°~82°, combination controls for hand or foot operation. Boom angle indicator.

JIB - Single stage lattice type, 5°, 25° or 45° offset (tilt type). Single sheave, 13 7/8" (0.352 m) root diameter, at jib head. Stored along side base boom section. Jib length is 24.6' (7.5m)

AUXILIARY LIFTING SHEAVE (SINGLE TOP) - Optional. Single sheave, 12 5/8" (0.32 m) root diameter. Mounted to main boom head for single line work. (Stowable.)

ANTI-TWO BLOCK - Pendant type over-winding cut out device with audio-visual (FAILURE lamp/BUZZER) warning system.

SWING

Hydraulic axial piston motor driven through planetary swing speed reducer. Continuous 360° full circle swing on ball bearing turntable at 3.4 rpm. Equipped with manually locked/released swing brake. A swing lock (pin-in-hole lock) for pick and carry and travel modes, manually engaged in cab.

HOIST

MAIN HOIST - Variable speed type with grooved drum driven by hydraulic axial piston motor through winch speed reducer. Power load lowering and raising. Equipped with automatic brake (Neutral brake) and counterbalance valve. Controlled independently of auxiliary hoist.

DRUM - Grooved 12 5/8" (0.320 m) root diameter x 19 1/16" (0.4845 m) wide. Wire rope: 498 ft. of 5/8" diameter rope (152m of 16mm). Drum Capacity: 734 ft. (223.6m) 6 layers. Maximum line pull (permissible): 10, 078 lbs. (4 571 kg)*. Maximum line speed: 351 FPM (107 m/min).

AUXILIARY HOIST - Optional. Variable speed type with grooved drum driven by hydraulic axial piston motor through winch speed reducer. Power load lowering and raising. Equipped with automatic brake (neutral brake) and counterbalance valve. Controlled independently from main hoist.

DRUM - Grooved 12 5/8" (0.320 m) root diameter x 10 3/8" (0.2635 m) wide. Wire rope: 249 ft. of 5/8" diameter rope (76m of 16mm). Drum capacity: 399 ft. (121.6m) 6 layers.

Maximum line pull (permissible): 10, 078 lbs. (4 571 kg)*.

Maximum line speed: 351 FPM (107m/min).

*Maximum permissible line pull may be affected by wire rope strength.

Wire Rope - Filler wire, extra improved plow steel, pre-formed, independent wire rope core, right regular lay.

5/8" (16mm) 6 x 37 class 5/8" (16mm) 19 x 7 class

19 x 7 is non-spin rope intended for single line work and is not recommended for multiple part reeving.

HOOK BLOCKS - Optional

- 1. 30 ton (27.2 metric ton) 4 sheaves with swivel hook and safety latch, for 5/8" (16mm) wire rope.
- 2. 22 ton (20 metric ton)-3 sheaves with swivel hook and safety latch, for 5/8" (16mm) wire rope.
- 3. 4.4 ton (4.0 metric ton) Weighted hook with swivel and safety latch, for 5/8" (16mm) wire rope.

HYDRAULIC SYSTEM

PUMPS - Tandem gear pump for telescope, elevation, and hoist. Tandem gear pump for swing, outriggers, steering and optional equipment. Powered by carrier engine. Pump disconnect for crane is engaged/disengaged by rotary switch from operator's cab.

CONTROL VALVES - Multiple valves actuated by hand levers with integral pressure relief valves.

RESERVOIR - 116 gallon (438 lit.) capacity. External sight leve gauge.

FILTRATION - 26 micron return filter, full flow with bypass protection, located inside of hydraulic reservoir. Accessible for easy replacement.

CAB AND CONTROLS

Both crane and drive operations can be performed from one cab mounted on rotating superstructure.

Left side, 1 man type, steel construction with sliding door access and safety glass windows opening at side, rear and roof. Windshield glass window is shatter-resistant. Tilt-telescoping steering wheel. Adjustable control levers for swing, boom telescoping, boom hoist, auxiliary hoist and main hoist (with swing free-lock selector switch). Control levers for swing and boom hoist can change neutral positions and tilt for easy access to cab. Engine throttle knob. Foot operated controls: boom hoist, service brake and engine throttle.

Dash-mounted engine start/stop, monitor lamps, cigarette lighter, parking brake switch, steering mode select switch, rear steering lock switch, and telescoping correction switches.

Instruments - Torque converter oil temperature, engine water temperature, air pressure, fuel, hydraulic oil pressure, speedometer, tachometer and hour meter.

Tadano electronic LOAD MOMENT INDICATOR system (AML-M) including:

- Control lever lockout function
- Working radius and/or boom angle preset function (warning only)
- Warning buzzer
- Boom angle/boom length/jib offset angle/working radius/rated loads/actual loads read out
- Ratio of actual load moment to rated load moment indication
- Working condition register switch
- External warning lamp

Operator's cab console includes transmission gear selector, pump engaged/disengaged switch, suspension spring lock switch, outrigger controls, sight level bubble, drive selector switch, swing free-lock selector switch, working light switch and ashtray. Swing lock knob, swing brake and 4 way adjustable seat with high back and seat belt.

CARRIER SPECIFICATIONS

TYPE - Rear engine, left hand steering, driving axle 2-way selected type by manual switch, 4 x 2 front drive, 4 x 4 front and rear drive.

FRAME - High tensile steel, all welded box construction.

AUTOMATIC TRANSMISSION - Electronically controlled full automatic transmission. Torque converter driving full powershift with driving axle selector. 6 forward and 2 reverse speeds, constant mesh.

3 speeds - high range - 2 wheel drive; 4 wheel drive

3 speeds - low range - 4 wheel drive

RAVEL SPEED - 31.2 mph maximum.

AXLE - Front: Full floating type, steering and driving axle with planetary reduction. Rear: Full floating type, steering and driving axle with planetary reduction and non-spin differential.

STEERING - Hydraulic power steering controlled by steering wheel. Three steering modes available: 2 wheel front, 4 wheel coordinated and 4 wheel crab.

SUSPENSION - Front: Semi-elliptic leaf springs with hydraulic lockout device. Rear: Semi-elliptic leaf springs with hydraulic lockout device

BRAKE SYSTEMS - Service: Air over hydraulic disc brakes on all 4 wheels. Parking/Emergency: Spring applied—air released brake acting on input shaft of front axle.

TIRES Standard 20.5 x 25 - 24 PR (OR), Optional 16.0 x 25 - 28 PR (OR),

OUTRIGGERS - Four hydraulic, beam and jack outriggers. Vertical jack cylinders equipped with integral holding valve. Each outrigger beam and jack is controlled independently from cab. Beams extend to 19' 3/8" (5.8m) center-line and retract to within 8' 1 5/8" (2.48m) overall width with floats. Outrigger jack floats are attached thus eliminating the need of manually attaching and detaching them. Controls and sight bubble located in upper structure cab.

ENGINE

Model Type

Type No. of cylinders

Combustion Bore x Stroke, in. (mm)

Displacement, cu. in (liters) Air inlet heater

Air cleaner Oil filter Fuel Filter

Fuel tank, gal. (liters)

Cooling

Mitsubishi 6D14T Direct Injection Diesel

6

4 cycle, turbo charged 4.331 x 4.527 (110 x 115)

400 (6.557) 24 volt prehea

24 volt preheat Dry type, replacement element (dual)

Full flow with replacement element Full flow with replacement element 66.0 (250), right side of carrier

Liquid pressurized, recirulating by-pass

Radiator

Fan, in. (mm) Starting

Charging

Battery Compressor, air, CFM (I/min) Horsepower,(kW)

Torque, Max. ft-lb (kgm) Capacity, gal. (liters)

Capacity, gal. (lite Cooling water

Lubrication

Fin and tube core, termostat controlled Blower type, 8-blade, 23.6 (600) dia.

24 volt

24 volt system, negative ground

2 - 140 amp. hour

21.3 CFM (602) at 2,000 rpm Net 180 (134) at 2600 rpm 420 (58) at 1600 rpm

3.4 (13)

STANDARD EQUIPMENT

- Four section full power partly synchronized boom 28.2' 88.3' (8.6m -26.9m)
- Single stage stowable lattice jib 24.6' (7.5m) with 5°, 25°, 45° pinned offset (tilt type)
- Boom hoist foot control
- Boom angle indicator
- Variable speed main hoist with cable follower
- Tadano twin swing system
- 4 x 4 x 4 drive
- Hydraulic lockout suspension system
- Independently controlled outriggers
- Self-storing outrigger pads
- Electronic controlled automatic transmission driven by torque converter
- Complete highway light package
- Anti two block device (Overwind cutout)
- Electronic crane monitoring system
- Tadano electronic load moment indicator system (AML-M) includina:
 - -Control lever lockout function
 - Working radius and/or boom angle preset function (warning only)
 - Warning buzzer
 - Boom angle/boom length/jib offset angle/working radius/ rated loads/actual loads read out
 - Ratio of actual load moment to rated load moment indication
 - Working condition register switch
 - External warning lamp
- Front windshield wiper and washer
- Roof windshield wiper
- Roof windshield lock warning
- Rear view mirrors (right and left side)
- 4 way adjustable seat with high back
- Tilt-telescoping steering wheel

- Neutral position adjustable control lever (swing and boom hoist)
- Seat belt
- Cab floor mat
- Electric fan in cab
- Back up alarm
- Low oil pressure/high water temperature warning device (visual)
- Fenders
- Towing hooks front and rear
- Lifting eyes
- Tool storage compartment- External warning lamp
- Full instrumentation package
- Pump disconnect in operator's cab
- Non-spin rear differential
- Water separator with filter
- Flood lights
- Outrigger hose protection
- 24 volt electric system
- 24 volt start
- Tire inflation kit (with tire pressure gauge)
- Hydraulic pressure gauge
- Hydraulic oil cooler

OPTIONAL EQUIPMENT - Variable speed auxiliary hoist with cable follower

- Auxiliary lifting sheave (single top) stowable
- 30 ton (27.2 metric ton) 4 sheave hook block
- 22 ton (20 metric ton) 3 sheave hook block
- 4.4 ton (4 metric ton) hook ball and swivel
- Heater
- Optional tires 16.00 X 25 -20PR (OR)
- Fire extinguisher
- Tool kit
- Drum rotation indicator (thumper type) main and/or aux hoist

HOISTING SPECIFICATIONS

LINE SPEEDS AND PULLS

		Main or auxiliary hoist - 12 5/8" (0.32 m) drum										
		4	ne	Line pulls								
Layer	Speed	Spe	eds ²	Availa	ble ¹	Permissible 4						
Layer	Opeeu	F.P.M	m/min	Lbs.	kgf	Lbs.	kgf					
1st	Low	118	36	11,086	5028	10, 078	4571					
151	High	236	72 11,000		3020	10, 078	4571					
2nd	Low	130	40	10,642	4827	9675	4388					
2110	High	259	79	10,042	4027	9675	4300					
3rd	Low	141	43	10,270	4658	0226	4005					
Siu	High	282	86	10,270	4000	9336	4235					
4th	Low	153	47	9953	4515	9048	4104					
**(II	High	305	93	3333	4313	9048	4104					
5th	Low	164	50	9680	4391	8800	2002					
ວເກ	High	328	100	3000	7031	0000	3992					
6th ³	₃ Low 176	176	54	9442	4283	8584	0000					
OHI	High	351	107	3442	7200	0004	3893					
	L		F 4			k az a li						

¹Developed by machinery with first layer of wire rope, but not based on rope strength or other limitation in machinery or equipment.

³Sixth layer of wire rope is not recommended for hoisting operations.

⁴Permissible line pull may be affected by wire rope strength.

DRUM WIRE ROPE CAPACITIES


Wire		Drum Gr 3" (16 mr			Aux. Drum Grooved Lagging 5/8" (16 mm) wire rope				
Rope Layer	Rope	oer layer	Total wire rope		Rope	per layer	Total wire rope		
Layor	Feet	Meters	Feet	Meters	Feet	Meters	Feet	Meters	
1	99	30.1	99	30.1	54	16.4	54	16.4	
2	108	32.9	207	63.0	59	17.9	113	34.3	
3	117	35.8	324	98.8	64	19.5	117	53.8	
4	127	38.7	451	137.5	69	21.0	245	74.8	
5	136	41.6	588	179.1	74	22.6	320	97.4	
6	146	44.5	734	223.6	79	24.2	399	121.6	

DRUM DIMENSIONS

_ength	MA	MAIN				
	Inch	mm	Inch	mm		
Root Diameter	12 5/8	320	12 5/8	320		
Length	19 1/16	484.5	10 3/8	263.		
Flange Diameter	20 7/8	530	20 7/8	530		

²Line speeds based only on hook block, not loaded

OPERATING RADIUS / LIFTING HEIGHT CHART

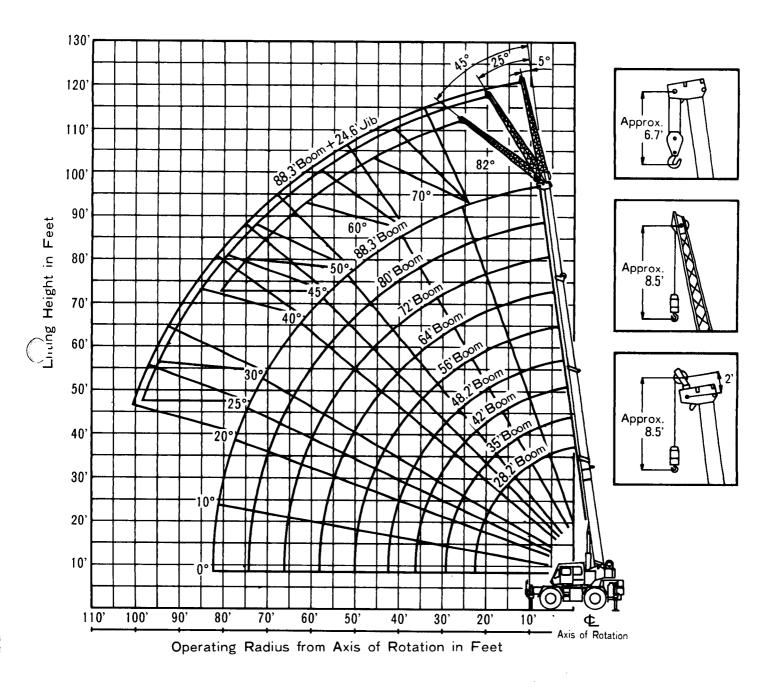

NOTE: Boom and jib geometry shown are for unloaded condition and machine standing level on firm supporting surface. Boom deflection and subsequent radius and boom angle change must be accounted for when applying load to hook.

TR-300XL TOTAL RATED LOAD CHART (IN POUNDS)

	ON OUTRIGGERS FULLY EXTENDED 360											
Load Radius		Boom Length in Feet										
in Feet	28.2 (8.6m)	35 (10.7m)	42 (12.8m)	48.2 (14.7m)	56 (17.1m)	64 (19.5m)	72 (22.0m)	80 (24.4m)	88.3 (26.9m)			
10	60,000 (59°)	40,000 (66°)	38,500 (70°)	37,000 (73°)	33,000 (76°)	29,150 (78°)	24,000 (80°)					
12	43,000 (54°)	40,000 (62°)	38,500 (67°)	37,000 (71°)	33,000 (74°)	29,150 (76°)	24,000 (78°)	19,000 (79°)				
15	34,500 (46°)	33,000 (56°)	33,000 (63°)	32,000 (67°)	30,500 (71°)	29,150 (74°)	23,000 (76°)	19,000 (78°)	15,500 (79°)			
20	26,000 (27°)	26,000 (45°)	26,000 (55°)	25,500 (61°)	24,200 (65°)	23,000 (69°)	20,500 (72°)	19,000 (74°)	15,500 (76°)			
25		20,500 (31°)	20,500 (45°)	20,500 (53°)	19,500 (59°)	18,500 (64°)	17,250 (67°)	16,600 (70°)	15,500 (73°)			
30			16,500 (34°)	16,500 (45°)	16,200 (53°)	15,600 (59°)	14,600 (63°)	14,000 (66°)	13,100 (69°)			
35			12,660 (16°)	12,660 (35°)	12,850 (46°)	12,850 (53°)	12,500 (58°)	12,080 (62°)	11,150 (66°)			
40				9,850 (21°)	10,300 (38°)	10,700 (47°)	10,700 (53°)	10,380 (58°)	9,700 (62°)			
45					8,230 (28°)	8,600 (40°)	9,000 (48°)	9,000 (54°)	8,500 (58°)			
50			-		6,670 (9°)	7,050 (32°)	7,350 (42°)	7,390 (49°)	7,390 (54°)			
55						5,810 (21°)	6,000 (35°)	6,160 (43°)	6,300 (50°)			
60							5,000 (26°)	5,170 (37°)	5,350 (45°)			
65						-	4,200 (13°)	4,360 (30°)	4,550 (40°)			
70								3,680 (21°)	3.850 (34°)			
75									3,200 (27°)			
80									2,700 (17°)			

P ROTATION									
Boom	Boom Length in Feet								
Angle	88.3(26.9m)Boom+24.6(7.5m)Jib								
Degree	5°tilt	25° tilt	45° tilt						
80°	6,600	4,400	3,300						
75°	6,600	4,400	3,300						
70°	6,300	4,400	3,100						
65°	5,190	4.000	2,960						
60°	4.370	3.540	2,860						
55°	3,780	3,180	2,760						
50°	3,350	2,900	2,660						
45°	2,920	2,650	2,500						
40°	2,380	2,200							
35°	1,980	1.850							
30°	1,670	1,530							
25°	1,400	1,270							
20°	1,150								

1,650 lbs. (750 kgs) shall be substracted from the total rated load of the main boom when jib is attached to main boom head.

WARNING AND OPERATING INSTRUCTIONS FOR LIFTING CAPACITIES

GENERAL

- Total rated loads shown on the TOTAL RATED LOAD CHART apply only to the machine
 as originally manufactured and normally equipped by TADANO LTD. Modifications to the machine or use of optional equipment other than that specified
 can result in a reduction of capacity.
- Construction equipment can be dangerous if improperly operated or maintained.
 Operation and maintenance of this machine must be in compliance with the information in the operation, safety and maintenance manual supplied with machine. If this manual is missing, order replacement through the distributor.
- 3 The operator and other personnel associated with this machine shall fully acquaint themselves with the latest applicable American National Standards Institute (ANSI) safety standards for cranes.

SET UP

- 1. Total rated loads shown on the chart are the maximum allowable crane capacities and are based on the machine standing level on firm supporting surface under ideal job conditions. Depending on the nature of the supporting surface, it may be necessary to have structural supports under the outrigger floats or tires to spread the load to a larger bearing surface.
- 2. For outrigger operation, outriggers shall be fully extended with tires free of supporting surface before operating crane.

OPERATION

- Total rated loads with outriggers fully extended do not exceed 85% of the tipping loads as determined by SAE Crane Stability Test Code J-765.
- Total rated loads above bold lines in the chart are based on crane strength and those below, on its stability. They are based on actual load radius increased by boom deflection.
- Total rated loads include the weight of main hook block (600 lbs for 30 tons capacity), auxiliary hook ball (110 lbs for 4.4 tons capacity), sling and auxiliary lifting devices and their weights shall be subtracted from the listed capacities to obtain the net load to be lifted.
- 4. Total rated loads are based on freely suspended loads and make no allowance for such factors as the effect of wind, sudden stopping of loads, supporting surface conditions, inflation of tires, operating speeds, side loads, etc. Side pull on boom or jib is extremely dangerous.
- Total rated loads do not account for wind on lifted load or boom. Total rated loads and boom length shall be appropriately reduced, when wind velocity is above 20 mph (9m/sec.).
- Total rated loads at load radius shall not be exceeded. Do not tip the crane to determine allowable loads.
- Do not operate at boom lengths, radii, or boom angle, where no capacities are shown.Crane may overturn without any load on the hook.
- When boom length is between values listed, refer to the total rated loads of the next longer and next shorter booms for the same radius. The lesser of the two total rated loads shall be used.

- When making lifts at a load radius not shown, use the next longer radius to determine allowable capacity.
- 10. Single line operation should not exceed 8,800 lbs (4000 kg).
- Loaded boom angles are approximate. The boom angle before loading should/ greater to account for deflection.
- 12. The 28.2' (8.6 m) boom length capacities are based on boom fully retracted. If not fບ້າເງິ້ retracted [less than 35' (10.7 m)boom length], use the total rated loads for the 35' (10.7 m) boom length.
- 13. Extension or retraction of the boom with loads may be attempted within the limits of the TOTAL RATED LOAD CHART. The ability to telescope loads is limited by hydraulic pressure, boom angle, boom length, crane maintenance, etc.
- 14. For lifting capacity of single top, reduce the total rated loads of relevant boom by 550 lbs (250 kg). Capacities of single top shall not exceed 6,610 lbs (3000 kgs) including main hook.
- 15. When erecting and stowing jib, be sure to retain it by hand or by other means to prevent its free movement.
- 1650 lbs (750 kgs) shall be subtracted form the total rated loads of the main boom, when jib is attached to main boom head. Jib weight is 770 lbs (350 kgs).
- 17. Use Anti-Two Block (OVERWIND CUTOUT) disable switch when erecting and stowing the jib and stowing the hook block. While the switch is pushed, the hoist does not stop, even when overwind condition occurs.
- 18. For boom lengths with 24.6' (7.5 m) Jib, total rated loads are determined by loaded boom angle only in the column headed "88.3' (26.9m) Boom + 24.6' (7.5 m) Jib". For boom angles not shown, use the next lower loaded boom angle to determine allowable capacity.
- 19. When lifting a load by using jib (auxiliary hoist) and boom (main hoist) simultaneously, do the following:
 - Illuminate the jib indicator lamps and make the jib offset display screen indicate the same value as the actual offset by repeatedly pushing the boom state register switch.
 - Before starting operation, make sure that the weight of load is within the total rated load for jib.

DEFINITIONS

- Load Radius: Horizontal distance from a projection of the axis of rotation to supporting surface before loading to the center of the vertical hoist line or tackle with load applied.
- 2. Loaded Boom Angle: The angle between the boom base section and the horizontal, after lifting the total rated load at the load radius.
- 3. Working Area: Area measured in a circular arc about the centerline of rotation.
- Freely Suspended Load: Load hanging free with no direct external force applied except by the hoist line.
- 5. Side Load: Horizontal side force applied to the lifted load either on the ground or in the air.

Boom Length in Feet (meters)	28.2' (8.6)	35' to 56' (10.7 to 17.1)	64' to 88.3' (19.5 to 26.9)	Single top Jib
No. of part line	8	6	4	1

The lifting capacity data are stored in the Load Moment Indicator (AML-M) based on the standard number of parts of line listed in the above chart. Standard number of parts of line should be according to the above

TR-300XL TOTAL RATED LOAD CHART (IN POUNDS)

TIRE: 20 5-25-24PR

	ON RUBBER													
		Stationary									Creep			
Load Radius		Over	Front	:	30	60° R	otatio	n	:	Over	Front			
in	Boom Length in Feet				Boor	Boom Length in Feet				n Len	gth in	Feet		
Feet	28.2' (8.6 m)	48.2' (14.7m)	64' (19.5m)	80' (24.4m)	28.2' (8.6m)	48.2° (14.7 m)	64' (19.5m)	80' (24.4m)	28.2' (8.6m)	48.2' (14.7m)	64' (19.5m)	80' (24.4m)		
10	35,500	27,800	18,000		23.000	21,910			30,000	25,500	18,000			
12	31,400	27,800	18,000		16,400	15,800	17,080		25,800	25,500	18,000			
15	21,700	19,800	18,000	11,900	11,230	10,710	11,680	12,200	21,150	19,800	18,000	11,900		
20	13,800	13,300	13,500	11,300	6,620	6,150	7,000	7,470	13,800	13,300	13,500	11,300		
25		8,850	9,220	9,460		3,720	4,530	4,920		8,850	9,220	9,460		
30		6,200	6,780	7,200		2,200	2,960	3,350		6,200	6.780	7.200		
35		4,400	5,180	5,420		1,180	1,890	2,270		4,400	5,180	5,420		
40		3,150	3,900	4,250			1,100	1,480		3,150	3,900	4,250		
45			2,920	3,250				900			2,920	3,250		
50			2,160	2,500							2,160	2,500		
55			1,580	1,900							1,580	1,900		
60				1,420								1,420		
65				1,000								1,000		

NOTE: 35,500 lbs capacity requires 6 parts of line. All other capacities for On-Rubber operation shall be picked using 4 parts of line.

Working Area 360° Over 7/// Front 28.2'(8.6m) Approx. .35⁷(10.7m) 7/11 42'(12.8m) 7/11 48.2'(14.7m) / / /// 56'(17.1m) 7/11 64'(19.5m) 7/11 72'(22.0m) 7/11 80'(24.4m) / //11 88.3'(26.9m)

Boom Length in Feet

WARNING AND OPERATING INSTRUCTIONS FOR ON RUBBER CAPACITIES

- 1. Total rated loads on rubber are in pounds and do not exceed 75% of tipping loads as determined by test in accordance with SAE J-765.
- 2. Total rated loads shown in the chart are based on condition that crane is set on firm level surfaces with suspension lock applied. Those above bold lines are based on tire capacity and those below, on crane stability. They are based on actual load radius increased by tire deformation and boom deflection.
- 3. Total rated loads are based on proper tire inflation, capacity and condition. Damaged tires are hazardous to safe operation of crane.
- 4. Tires shall be inflated to correct air pressure.

TIRE AIR PRESSURE

20.50-25-24PR-93 psi (6.55 kgf/cm2) 16.00-25-28PR-108 psi (7.5 kgf/cm2)

- 5. Over front operation shall be performed within two degrees in front of chassis.
- 6. On rubber lifting with "jib" and "auxiliary lifting sheave" (single top) are not permitted.
- When making lift on rubber, set parking brake.
- 8. For creep operation, boom must be centered over front of machine, swing tock engaged, and load restrained from swinging. Travel slowly and keep the lifted load as close to the ground as possible, and especially avoid any abrupt steering, accelerating or braking.
- 9. Do not operate the crane while carrying the load.
- 10. Creep is motion for crane not to travel more than 200 feet (60 m) in any 30 minute period and to travel at the speed of less than 1 mph (1.6 km/h).

WARNING AND OPERATING INSTRUCTIONS FOR USING THE LOAD MOMENT INDICATOR (AML-M)

Notes for Load Moment Indicator

- 1. When operating crane on outriggers:
 - Set P.T.O. switch to "ON".
 - · Push the outrigger state register switch to illuminate the outrigger indicator lamos
 - Push the boom state register switch repeatedly until the state of the indicator lamps and the offset display screen conforms to the actual state of the boom, the single top and the jib.
 - · When erecting and stowing jib, push boom state register switch repeatedly until jib indicator lamps flicker (in jib erection/stowing mode).
- 2. When operating crane on rubber:
 - · Lock suspension springs with boom over front and crane in traveling configuration.
 - · Set P.T.O. switch to "ON".
 - · Push the boom state register switch repeatedly to illuminate the boom indicator lamp.
 - · Push the on rubber state register switch to illuminate the on rubber indicator lamps. By repeatedly pushing the on rubber register switch, stationary and creep operation are selected alternately. When creep operation is selected, the on rubber indicator lamps flicker.

However, pay attention to the following.

(1) For stationary operation.

· The front capacities are attainable only when the over front indicator lamp is on. When the boom is more than 2 degrees from centered over front of chassis, 360° capacities are in effect.

- · When a load is lifted in the front position and then swung to the side area, make sure the value of the LOAD MOMENT INDICATOR (AML-M) is below the 360° lifting capacity.
- (2) For creep operation.
- · The creep capacities are attainable only when boom is in the straight forward position of chassis and the over front indicator is on. If boom is not in the straight forward position of chassis, never lift load.
- 3. During crane operation, make sure that the displays on front panel are in accordance with actual operating conditions.
- 4. The displayed values of LOAD MOMENT INDICATOR (AML-M) are based on freely suspended loads and make no allowance for such factors as the effect of wind. sudden stopping of loads, supporting surface conditions, inflation of tire, operating speed, side loads, etc.

For safe operation, it is recommended when extending and lowering boom or swinging, lifting loads shall be appropriately reduced.

5. LOAD MOMENT INDICATOR (AML-M) is intended as an aid to the operator. Under no condition should it be relied upon to replace use of capacity charts and operating instructions. Sole reliance upon LOAD MOMENT INDICATOR (AML-M) aids in place of good operating practice can cause an accident. The operator must exercise caution to assure safety.

TR-300XL Axle Weight Distribution Chart

		Pounds			Kilograms	V 10
	GVW	Front	Rear	GVW	Front	Rear
Basic standard machine includes: 28.2'—88.3' (8.6—26.9m) 4-section boom 24.6' (7.5m) jib						. 1
main hoist with 498 ft (152m) of 5/8" (16mm) wire rope 30 ton (27.2 metric ton) hookblock 4.4 ton (4 metric ton) hookblock 5180 lbs. (2350kg) counterweight	53,732	26,949	26,783	24,373	12,224	12,149
882 lbs. (400kg) counterweight Mitsubishi 6D14T engine; 20.5 X 25—20PR tires						-
Add: Auxiliary hoist with 249' (76m) of 5/8" (16mm)	+1,067	-211	+1,278	+484	-96	+580
wire rope Auxiliary lifting sheave (single top)	+ 95	+256	- 161	+ 43	+116	- 73
Remove:						
30 ton (27.2 metric ton) hookblock	-600	-996	+396	-272	-452	+180
4.4 ton (4 metric ton) hookblock 882 lbs. (400kg) counterweight	-220 -882	+102 +168	-322 -1,050	-100 -400	+ 46 + 76	-146 -476

5180 lbs (2350kg) counterweight used with main hoist and auxiliary hoist. 882 lbs. (400kg) counterweight used to add to 5180 lbs (2350 kg) with main hoist only.

MDI/TADANO HYDRAULIC CRANES Manufactured by TADANO LTD.

Distributed by

Machinery Distribution, Inc.

A subsidiary of 🙏 Mitsubishi Corporation

2011 West Sam Houston Parkway North Houston, Texas 77043-2421 Phone 713-467-1234 Fax 713-467-3232 Northeast Crane Sales & Service, LLC 500 Ohio Street Lockport, New York 14094

716-433-4600